



DEL 200/6 A/B PP DEL 200/10 A/B PP

PL | EN


1. Zamocuj obudowę głośnika w otworze sufitu, ostrożnie opuszczając sprężyny uchwytów.

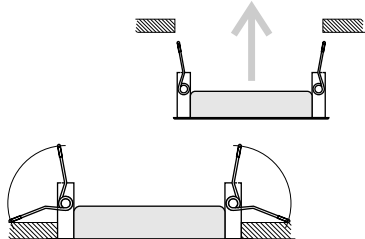


2. Wyciągnij trzy widoczne płaskie sprężynki po wewnętrznej stronie osłony z otworów i delikatnie przekreć.

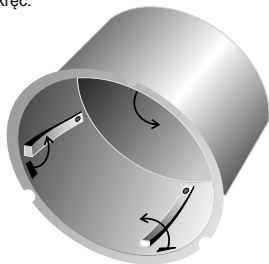

3. Wprowadź przewody podłączeniowe do środka przez obręcz głośnika oraz przepust osłony.

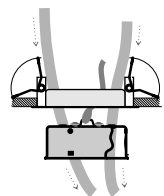


4. Ustaw osłonę tak aby otwory znajdujące się na kołnierzu pokrywały się z nitami na obudowie i wsuń osłonę do środka aż poczujesz opór.

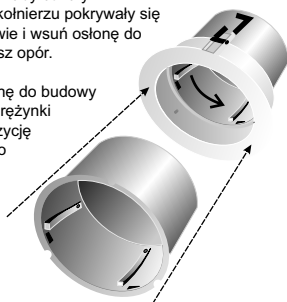


5. Dociskając osłonę do budowy przesunąć płaskie sprężynki z powrotem na pozycję wyjściową i włożyć do otworów.

6. Połącz przewody szeregowo, a następnie przykręć do kostki ceramicznej. Ze względu na wykorzystanie jednej kostki ceramicznej należy każdą z żył linii głośnikowych (wchodzącą i wychodzącą) połączyć za pomocą tulejek zaciskowych (plus z plusem, zero z zerem).

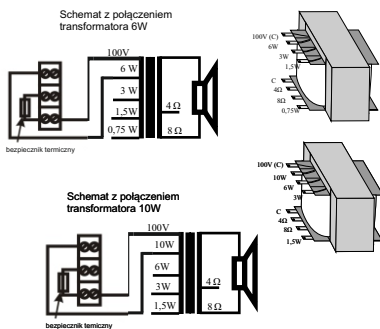


7. Przymocuj głośnik wraz z siatką do obudowy dociskając a następnie przekreślając w prawo.

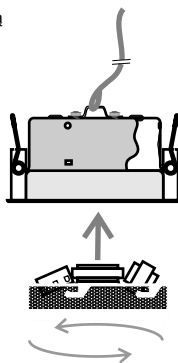


8. Przymocuj linkę stalową do stałego punktu sufitu. Nie dopuszcza się stosowania tulei rozporowych wykonanych z tworzywa sztucznego oraz ze stopów Zn-Al

9. Sprawdź poprawność połączenia


1. Mount the speaker cabinet in the ceiling hole, set the springs handles carefully.

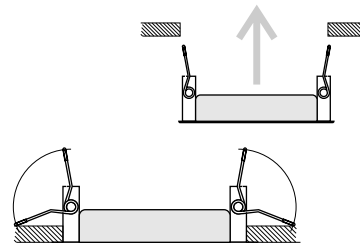

2. Pull out three flat springs from the holes, visible on the inside cover and gently twist.

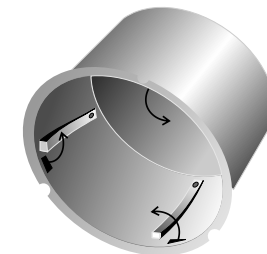


3. Enter the connection wires through the speakers rim, and through the rubber bushings in speaker cover.

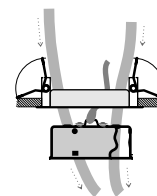


4. Set the cover so that the holes located on the flange coincide with the rivets on the chassis and slide it until you feel resistance.

5. Pushing the cover, slide flat springs back into position and insert into the holes.

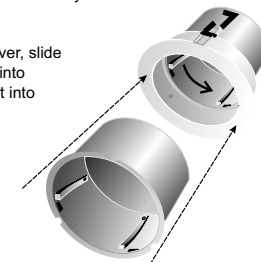

6. Connect the cables serially, then tighten to the ceramic cube.

Due to use of one ceramic cube, each of lines input and output wire should be connect using end sleeve

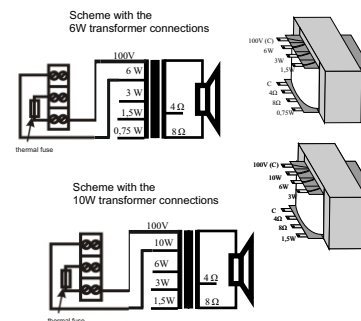

7. Mount the speakers mesh to the housing, pressing and then turning to the right.

8. Mount the steel cable to the point of the ceiling. Wall plug with plastic or Zn-Al alloys bushing should not be used.

9. Check again, if connection is correct

